

0901116A Valve Stem Button

INSTALLATION INSTRUCTIONS

SPECIFICATIONS

Contents:

Ten stem button and set screw assemblies (steel).

INSTALLATION

When Installing this Product...

1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
3. Installer must be a trained, experienced service technician.
4. After installation is complete, check out product operation as provided in these instructions.


Installation

1. Loosen the old stem button set screw.
2. Unscrew and discard the old stem button and set screw.
3. Thread the new button onto the valve stem.
4. Ensure the stem is either fully down or fully up (see Table 1).
5. Adjust the button to the proper height (see Table 1).
6. Tighten the set screw.
7. Check the stem height to verify it is correct.

Table 1. Proper Stem Button Height.

Valve	Y1 in in. (mm)	Y2 in in. (mm)
V5011N1xxx or V5011N2xxx (2-way)	3-1/2 (89)	5-1/4 (133)
	Stem Fully Down	
V5013N (3-way) or V5011N3xxx (2-way)	4-3/16 (107)	5-15/16 (151)
	Stem Fully Up	

NOTE: Y2 dimension includes stem extension for 8 in. MP953 Actuator.

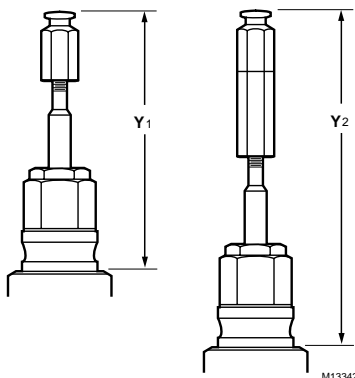

Home and Building Control

Honeywell Inc.
Honeywell Plaza
P.O. Box 524
Minneapolis, MN 55408-0524

Home and Building Control

Honeywell Limited-Honeywell Limitée
155 Gordon Baker Road
North York, Ontario
M2H 3N7

63-2555-1 B.B. Rev. 8-99



Printed in U.S.A. on recycled
paper containing at least 10%
post-consumer paper fibers.

www.honeywell.com

